

Model 50 Lock

OPEN / CLOSE THE LOCK

1. Power lock by briskly turning the dial back and forth in both directions until simultaneous green and red flashes display.
2. Position dial to cover red bar and enter combination.* (Factory Combination is "502550".) To cancel combination entry, press Clear.
 - Single User access mode - One slow green flash displays.
 - Dual User access mode - Two short green flashes display. Enter second combination. (Do NOT turn the dial between combination entries.) One slow green flash displays.
4. Dial right (CW) within ten second window, to retract bolt.
5. To close lock, dial left (CCW) until red bar is covered (i.e., bolt is closed.)

Note: * Five wrong tries --> 3 minute (maximum) lockout, Each consecutive wrong try after the first five --> 3 minute lockout.

Customer Service 1-800-950-4744

Model 50 Lock

CHANGE COMBINATION

1. Power lock by briskly turning the dial back and forth In both directions until simultaneous green and red flashes display.
2. Press Enter and then 1.
3. Enter current combination (Factory combination is "502550".)
4. Enter new six-digit combination.
5. Enter new combination again for verification.

CHANGE ACCESS (SINGLE/DUAL)

1. Power lock by briskly turning dial back and forth in both directions.
2. Press enter and then 2.
3. If Single to Dual access - Enter current combination.
If Dual to Single access - Enter both combinations. (Do Not turn the dial between combination entries.)

Note: Changing access will reset the combination(s) to "502550". See "Change Combination" to set new combinations

Customer Service 1-800-950-4744